


DWG # 209 VBJD

M500 SERIES

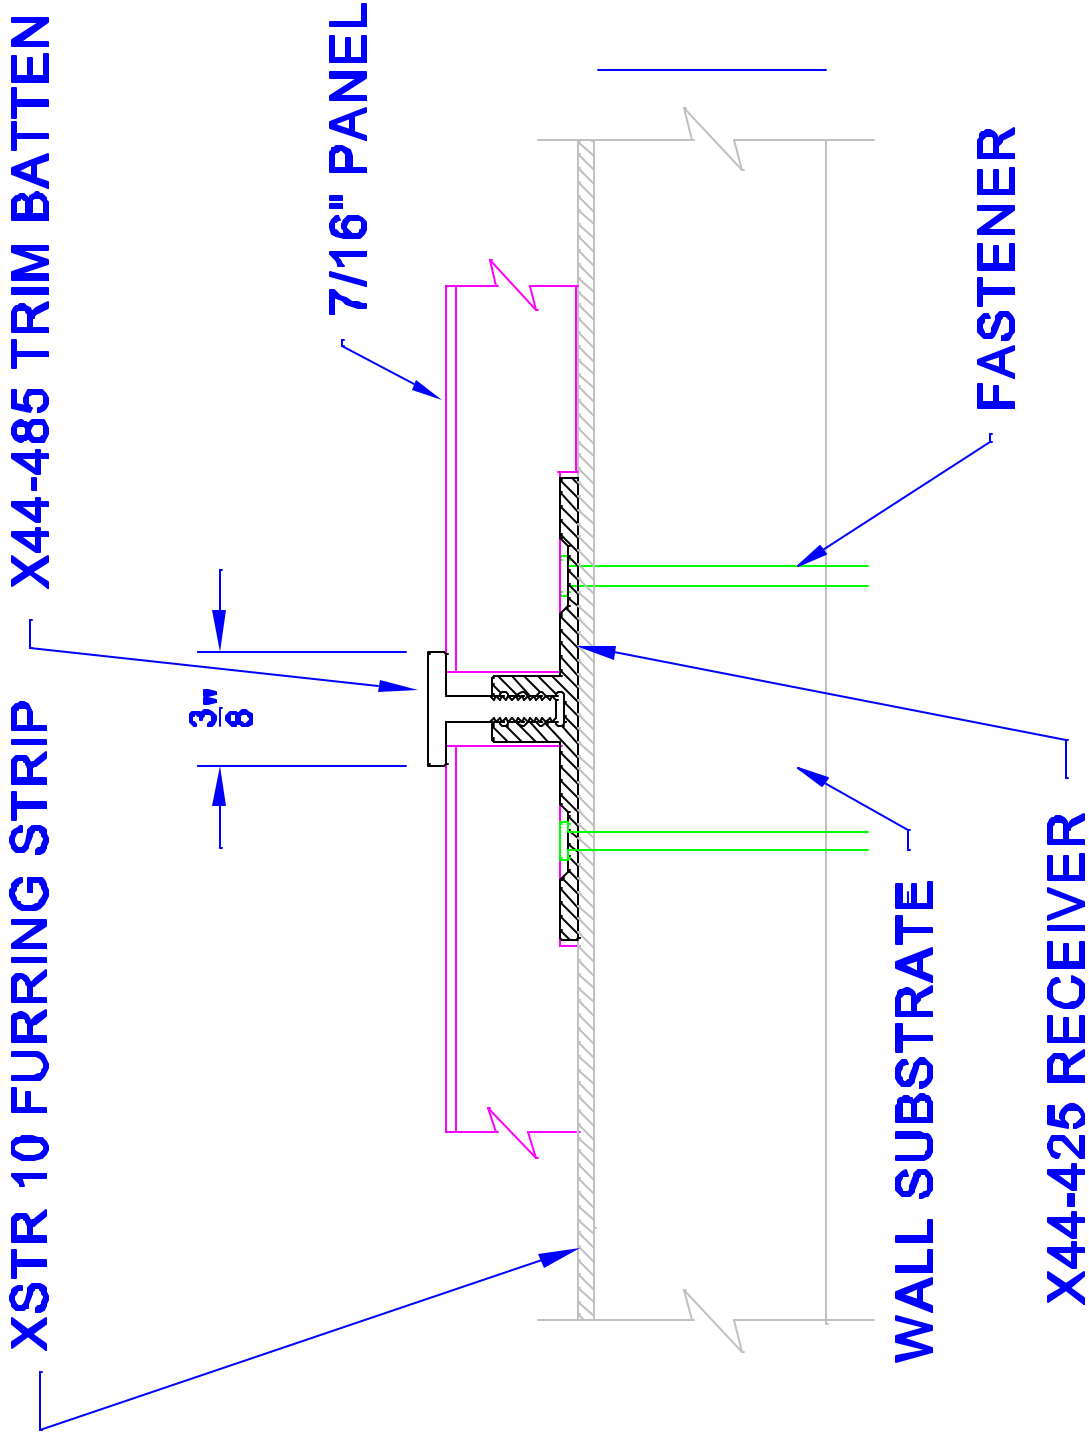

VERTICAL BUTT JOINT - 3/8" TRIM BATTEN

F